

>> smart entryline radio.  
Supplement



## Symbols



Warning



Environmental note



Possible damage to the vehicle



Tip



Instruction



Continuation symbol

(▷ page) Page reference

## **Publication details**

### **Internet**

Further information about smart vehicles and about Daimler AG can be found on the following websites:

<http://www.smart.com>

<http://www.daimler.com>

### **Editorial office**

You are welcome to forward any queries or suggestions you may have regarding this manual to the technical documentation team at the following address:

Daimler AG, HPC: R822

D-70546 Stuttgart, Germany

Not to be reprinted, translated or otherwise reproduced, in whole or in part, without the written permission of Daimler AG.

<b>Index</b> .....	<b>2</b>	<b>At a glance</b> .....
		<b>7</b>
<b>Introduction</b> .....	<b>4</b>	<b>Audio</b> .....
		<b>15</b>

**A**

<b>Autostore</b> .....	17
<b>AUX mode</b> .....	20
Activating .....	20

**B**

<b>Balance</b> .....	11
<b>Basic functions</b> .....	9
<b>Bass</b> .....	11

**C**

<b>Channel presets</b> .....	17
<b>Correct use</b> .....	4

**D**

<b>Display</b> .....	9
Switching on/off .....	13

**F**

<b>Factory settings</b> .....	12
-------------------------------	----

**G**

<b>Guarantee</b> .....	4
------------------------	---

**L**

<b>Language</b>	
Setting .....	11

**M**

<b>Manual frequency entry (radio)</b> .....	16
<b>Metadata</b>	
Displaying .....	19
<b>MP3</b>	
Selecting a folder .....	20
<b>Mute</b> .....	10

**N**

<b>Normal track sequence</b> .....	18
------------------------------------	----

**O**

<b>Operating safety</b> .....	4
<b>Overview of controls</b> .....	8

**P**

<b>Playlist</b>	
Selecting .....	20

**R**

<b>Radio mode</b>	
Switching to .....	16
<b>Random track sequence</b>	
Within a storage medium .....	19
<b>Reset</b> .....	12

**S**

<b>Selecting active partition</b> .....	18
<b>Setting a station (radio)</b>	
Via manual frequency entry .....	16
<b>Sound settings</b> .....	11
<b>Station</b>	
Selecting .....	16
Storing .....	17
<b>Station names</b>	
Displaying .....	10
<b>Station search</b> .....	16
<b>Switching on/off</b> .....	10
<b>System settings</b> .....	11
Language .....	11
Reset .....	12

**T**

<b>Track sequence</b>	
Normal .....	18
Random .....	19
<b>Treble</b> .....	11

**U**

<b>USB mode</b> .....	17
Activating .....	18

**V**

<b>Volume</b> .....	10
<b>Volume level</b>	
Setting .....	21

## W

**Waveband**

Switching (radio) ..... 16

### General information

#### Guarantee

The smart sales organization<sup>1</sup> guarantees this accessory or replacement part for the duration of 24 months or 24,000 miles.

### Operating safety

#### Important safety notes

##### **WARNING**

In order to avoid distraction which could lead to an accident, the driver should enter system settings with the vehicle at a standstill and operate the system only when road and traffic conditions permit. Always pay full attention to traffic conditions first before operating system controls whilst driving.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

##### **WARNING**

Always select a volume at which you can still hear sounds from outside the vehicle (e.g. horns, rescue vehicles, police vehicles etc.). You could otherwise cause an accident.

##### **WARNING**

Change or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

##### **WARNING**

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 8 inches (20 cm) and more between the radiator and a person's body (excluding extremities: hands, wrists, feet and legs.)

#### Correct use

Always observe the following when using the audio equipment:

- the safety notes in this manual
- national road traffic regulations

##### **WARNING**

If work on electronic equipment or systems (e.g. the radio) and its software is carried out incorrectly, this equipment could stop functioning. The electronic systems are linked together by interfaces.

Modifications to electronic systems may also cause systems that have not been modified to malfunction. These malfunctions could affect the operating safety of your vehicle and therefore also have a considerable effect on your safety. Therefore, only have work on and changes to electronic components carried out at a qualified specialist workshop which has the necessary specialist knowledge and tools to carry out the work required.

Daimler recommends that you visit a smart center for this purpose.

#### Declarations of conformity

##### Vehicle components which receive and/or transmit radio waves

**USA:** "The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two

<sup>1</sup> The guarantor is the respective sales organization in the country in which the accessory or replacement part was bought (see the list in the service booklet).

conditions: 1) These devices may not cause harmful interference, and 2) These devices must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

**Canada:** "The wireless devices of this vehicle comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) These devices may not cause interference, and (2) These devices must accept any interference, including interference that may cause undesired operation of the device."





 


Controls - overview .....	8
Display .....	9
Basic functions .....	9

**>> At a glance.**

## Controls - overview

&gt;&gt; At a glance.

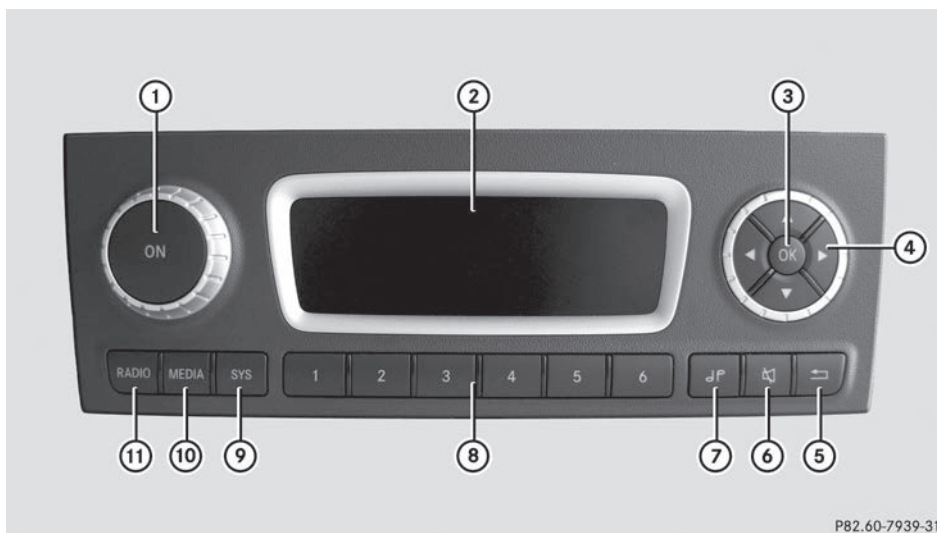

P82.60-7939-31

	Function	Page
①	Ⓞ control knob Press: switches the radio on/off Turn: adjusts the volume	10 10
②	Display	9
③	Ⓞ button	11

	Function	Page
④	▶ arrow button Radio mode: press the button to manually search for a station forwards MP3 mode: skip forwards, fast-forward ◀ arrow button Radio mode: press the button to manually search for a station backwards MP3 mode: skip backwards, rewind ▲/▼ arrow buttons Navigating within menus	16 20 16 20 11
⑤	↶ button (back button) Exits a menu	
⑥	🔇 button (mute)	10
⑦	🔊 button (sound button)	11

	Function	Page
⑧	Station presets	17
⑨	<b>sys</b> button Calls up the system menu	11

	Function	Page
⑩	<b>MEDIA</b> button Activates USB/AUX mode	18
⑪	<b>RADIO</b> button Switches on radio mode	16

Display

The display shows all the information concerning settings, stations, current track time etc.

Depending on the audio source, this information may differ. Details can be found in the individual sections.



Example: radio operation

- ① Station name
- ② Mute
- ③ FM waveband and station frequency
- ④ Radio mode is activated. Depending on the waveband and the preset group selected, the display shows either **FM 1**, **FM 2** or **AM**.
- ⑤ **Info** menu
- ⑥ **Presets** menu
- ⑦ **Radio** menu
- ⑧ Preset position of the selected station
- i** If no station name is available, the frequency is shown in the center of the display.




Example: USB mode

- ① USB: random track sequence within a storage medium
- ② Track time
- ③ Track name
- ④ **Media** menu
- ⑤ **Info** menu
- ⑥ **Music** menu
- ⑦ **USB** menu
- ⑧ Track number
- i** The track number refers to the folder in which the MP3 file is saved.

Basic functions

This section provides information about the essential functions of audio system basic. Further information about the functions can be found in the respective sections (▷ page 16) and (▷ page 17).

**WARNING**

Familiarize yourself with the most important steps before starting your journey. Never try out new functions whilst driving. This will distract you from the traffic conditions and you could cause an accident.

>> At a glance.

Always operate the radio in such a way that you maintain control of your vehicle in all traffic conditions.

Bear in mind that at a speed of just 30 mph (approximately 50 km/h), your vehicle is covering a distance of 44 feet (approximately 14 m) every second.

- i** You can find an overview of the functions of audio system basic in the Overview of controls section (▷ page 8).

### Switching on audio system basic

If the radio was on when the SmartKey was turned back in the ignition lock:

- ▶ Turn the SmartKey to position **1** or **2** in the ignition lock.

or

- ▶ Press the **ON** button.  
The radio calls up the last active function.

- i** When the radio is switched on without the ignition, the radio switches off again automatically after 30 minutes.

### Switching off audio system basic

- ▶ Turn the SmartKey to position **0** in the ignition lock.

or

- ▶ Press the **ON** button.

### Displaying station names

The station names can be shown in radio mode:

- ▶ Press the **RADIO** button.
- ▶ Press the **▼** arrow button repeatedly until **Station Info** is selected.
- ▶ Press **OK** to confirm.  
The **✓** symbol indicates the activated option.

- ▶ To deactivate the option, press the **OK** button again.  
The **□** symbol indicates the deactivated option.
- ▶ Press the back button to exit the menu.

### Volume settings

The volume settings apply to both radio mode and USB/AUX mode.

### Adjusting the volume

- ▶ **To raise the volume:** turn the control knob clockwise.
- ▶ **To lower the volume:** turn the control knob counter-clockwise.

### Mute

When in radio mode, the mute function mutes the radio.

If a traffic announcement is broadcast while the radio is muted, the announcement will still be audible.

To mute the traffic announcement, the **MUTE** button must be pressed again.

Pressing and holding switches the TA (traffic announcement) function on or off.

### Switching mute on

- ▶ Press the **MUTE** button.  
The currently active operating mode is muted.  
**MUTE** appears in the display.



### Switching mute off

 
- ▶ Press **MUTE** again.  
The mute function is deactivated. The corresponding symbol in the display goes out.





 
### Sound settings

The sound settings can be set separately for the radio and USB modes. In AUX mode, the same sound settings are used as in USB mode, however you can make additional settings on the external device. The sound settings are automatically stored every time you change them. The bass and treble settings allow you to adjust the intensity of the sound according to the type of music being played. The balance settings allow you to adjust the stereo sound to the left or right within the vehicle. In the default setting, the balance is set to the center of the vehicle.

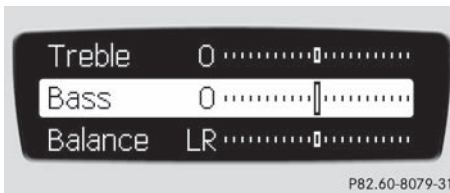

#### Setting the bass

 
- ▶ Press the  button.
- ▶ Press the  button repeatedly until **Bass** is selected.








- ▶ **To set the desired value:** press the  or  button to decrease or increase the value.
- ▶ **To confirm the value and exit the menu:** press the  or  or  button.

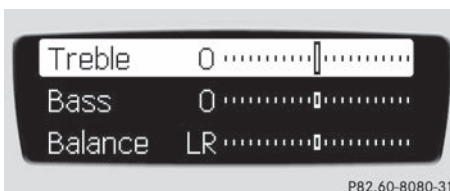

#### Setting the treble

 
- ▶ Press the  button.
- ▶ Press the  button repeatedly until **Treble** is selected.








- ▶ **To set the desired value:** press the  or  button to decrease or increase the value.
- ▶ **To confirm the value and exit the menu:** press the  or  or  button.
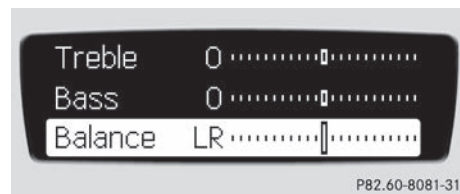
#### Adjusting the balance

- ▶ Press the  button.
- ▶ Press the  button repeatedly until **Balance** is selected.



- ▶ **To set the desired value:** press the  or  button to decrease or increase the value.
- ▶ **To confirm the value and exit the menu:** press the  or  or  button.

 
### System settings

 
#### General information

You can make the systems settings in the system menu.




#### Setting the language

This function sets the display menu language.

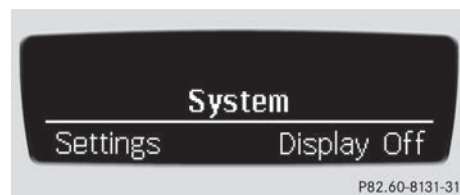- ▶ Press the  button.  
The system menu appears.




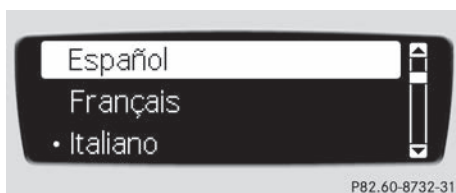 
System menu

- ▶ Press the  or  button to select **Settings** and press  to confirm. The first menu item, **Language**, is selected by default.






The **Language** menu item is selected

- ▶ Press  to confirm. The list of languages appears. The current language is indicated by a • dot.

 

 


List of languages

- ▶ Press the  or  button to select the desired language and press  to confirm. Audio system basic loads the language and switches back to the system settings menu.





### Brightness


Setting the display brightness:

- ▶ Press the  button. The system menu appears.
- ▶ Press the  button to select **Brightness** and press  to confirm. The brightness menu is shown

 




 

 

 


Adjusting the brightness

- ▶ Press the  or  button to darken or brighten the display.
- ▶ Press  or  to confirm and exit the menu.

 The display brightness can be set differently for daytime and nighttime operation. When the lights are switched off, the value is set to daytime operation. When the lights are switched on, the value is set to nighttime operation. In nighttime operation, the brightness can be reduced using the dimmer switch on the instrument cluster (see the vehicle Operator's Manual).

 


### Restoring the factory settings

- ▶ Press the  button. The system menu appears.
- ▶ Press the  or  button to select **Settings** and press  to confirm. Press the  button to select **System Reset** (restore).
- ▶ Press  to confirm. The following announcement is shown: **Are you sure you want to reset?** The default selection is **No**.
- ▶ If you do not want to restore the factory settings, press .
- ▶ Press  to exit the menu.
- ▶ Press  and  to restore the factory settings.
- ▶ The following message appears: **The system has been reset and will be restarted.**



### Switching the display on/off

---

Switching off the display:

- ▶ Press the  button.  
The system menu appears.
- ▶ Press the  or  button to select **Display Off**.  
The display switches off.

Switching on the display:

- ▶ Press the  button.  
The display switches on again.
-  The display can also be switched on by pressing any button except the mute button and the station presets.

>> At a glance.







Radio mode .....	16
USB/AUX mode .....	17

## >> Audio.

## Radio mode

### Notes

You can find information on the operating system and the essential functions of audio system basic in the Overview of controls (▷ page 8) and Essential functions (▷ page 9) sections.

### Switching on the radio

- ▶ Press the **ON** button.  
The radio switches to the last active function.  
If the last active function was radio mode, the radio menu will appear. You will hear the last station selected.
- ▶ **From another function:** press the **RADIO** button.  
The radio switches to radio mode. You will hear the last station selected.

### Switching wavebands

The following wavebands are available:

- FM
- AM
- ▶ **To select a waveband:** press the **▼** or **▶** button to select a waveband and press **OK** to confirm.  
The currently selected waveband is indicated by a dot.
- ▶ Press the **◀**, **▶** or **↩** button to exit the menu.

## Selecting a station

### General information

Stations may be selected in the following ways:

- using the station search (▷ page 16)
- by entering the frequency manually (▷ page 16)
- using the station presets (▷ page 17)

### Selecting stations via the station search function

- ▶ Set the desired waveband (▷ page 16).
- ▶ Press the **▶** button.  
The station search starts and searches forwards.
  - The search stops at the next station that can be received.
  - If the end of the waveband is reached, the search continues at the beginning of the waveband
  - If no station is found, the search stops at the point where the search was started.

### Manual frequency entry

Manual frequency entry is available in all wavebands.

- ▶ Set the desired waveband (▷ page 16).
- ▶ Press the **RADIO** button.
- ▶ Press the **▲** or **▼** button to select **Enter Frequency** and press **OK** to confirm.  
The display for manually entering the frequency appears.



P82.60-8136-31

Manual frequency entry

- ▶ Press the or button to set a higher or lower value for the first digit.
- ▶ To set the values of the following digits: press the button to select the digit.
- ▶ Press the or button to set a higher or lower value for the selected digit.
- ▶ Press the button to exit the menu.

### Selecting stations via the station presets

- ▶ Select the desired preset group (FM1, FM2 or AM).
  - ▶ Press one of the station presets – .
- The radio selects the station stored under the selected preset.

### Storing a station

#### General information

Each preset group (FM1, FM2 and AM) provides six presets.

The following options allow you to store a station:

- manually, using the station presets (all preset groups)
- automatically, using the Autostore function

### Storing stations using the station presets

- ▶ Set the desired preset group **FM 1**, **FM 2** and **AM**.
- ▶ Selecting a station
- ▶ Press and hold the desired station preset, e.g. , until you hear a tone. The currently set station is stored under preset in the preset group selected.

### Storing stations using the Autostore function

- ▶ The Autostore function automatically assigns receivable stations to the presets in the preset groups FM1, FM 2, ... in an order corresponding to the quality of reception. Any stations stored manually in these presets will be lost.
- ▶ Select the desired preset group.
- ▶ Press the button to select **Presets** and press to confirm. The display shows the assignment of the six presets as well as the **Autostore** menu item.



- ▶ Press the or button to select **Autostore** and press to confirm. The six stations with the best reception are saved to the six available memory positions.

 
### USB/AUX mode

#### USB mode

### Connecting a device

You can use the USB port to connect an external audio source to your audio system basic. More information is available from any qualified specialist workshop, e.g. a smart center or a smart service center.

A USB socket is installed on the left-hand side of the stowage compartment on the front-passenger's side and can be used to connect an external audio device (e.g. MP3 player) or a USB storage medium.

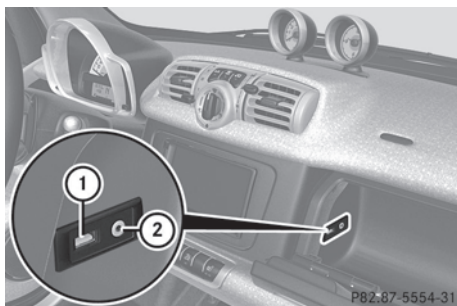

① USB port

② AUX port

**i** Only the FAT32 file system is recognized by the system; media formatted using the NTFS file system is not recognized.

### Activating the USB socket

- ▶ Press the **MEDIA** button.
- ▶ Press the **▼** button to select **Media** and press **OK** to confirm.
- ▶ If necessary, press the **▲** button to select **USB** and press **OK** to confirm. The main menu appears. The **USB** menu item is shown at the bottom left of the display.

**i** If you insert a USB medium during radio mode, the USB medium is activated automatically and the first track on the medium is played.

### USB menu

The following settings can be made in the USB menu:

- Selecting the active partition
- Normal track sequence
- Random track sequence
- Random folder sequence
- Displaying metadata

### Selecting the active partition

The **Select Active Partition** menu item makes it possible to display the partitions of the device that is connected to the USB port and to select the active partition.

 
- ▶ Press the **▼** or **◀** button to select **USB** and press **OK** to confirm.
- ▶ Press the **▼** or **▲** button to select **Select Active Partition** and press **OK** to confirm.

The available partitions are displayed.

- ▶ Press the **▼** or **▲** button to select the desired partition and press **OK** to confirm.

### Normal track sequence

- ▶ Press the **▼** or **◀** button to select **USB** and press **OK** to confirm.
- ▶ Press the **▼** or **▲** button to select **Normal Track Sequence** and press **OK** to confirm. The activated option is indicated by a dot.
- ▶ Press **⏮** to exit the menu. Symbol for normal track sequence ① appears in the display.

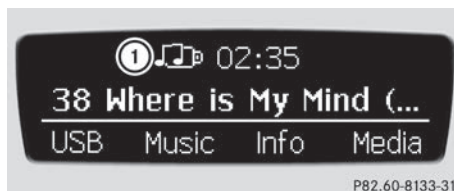

Example: USB mode

#### ① Normal track sequence

- i** By pressing the **▶** or **◀** button, you can play the next track or the previous track.
- i** By pressing and holding the **▶** or **◀** button, you can fast-forward or rewind.

### Random track sequence within a storage medium

Proceed as follows to select random track sequence from different folders:

- ▶ Press the or button to select **USB** and press to confirm.
- ▶ Press the or button to select **Random Tracks** and press to confirm. The activated option is indicated by a dot.
- ▶ Press to exit the menu. Symbol for random track sequence within a storage medium ① appears in the display.



Example: USB mode

- ① Random track sequence within a storage medium
- i** By pressing the or button, you can play the next track or the previous track.
- i** By pressing and holding the or button, you can fast-forward or rewind.

### Random track sequence within a folder

Proceed as follows to select random track sequence within a folder:

- ▶ Press the or button to select **USB** and press to confirm.
- ▶ Press the or button to select **Random Folder** and press to confirm. The activated option is indicated by a dot.
- ▶ Press to exit the menu. Symbol for random folder sequence ① appears in the display.



Example: USB mode

- ① Random track sequence within a folder
- i** By pressing the or button, you can play the next track or the previous track.
- i** By pressing and holding the or button, you can fast-forward or rewind.

### Displaying metadata

By activating this option, you can display the track stored in the ID3 tag on the main screen. When the option is deactivated, the file name is displayed.










- ▶ Press the or button to select **USB** and press to confirm.
- ▶ Press the or buttons to select **Display Metadata** and press to confirm. ☒ indicates the activated option.
- ▶ Press to deactivate the option again. ☐ indicates the deactivated option.
- ▶ Press to exit the menu.

### Music menu


 

 








In the **Music** menu, you can select folders, playlists and tracks.

- ▶ Press the or button to select **Music** and press to confirm. The name of the data carrier or the current folder is shown. If there are playlists on the data medium, a track can be selected using either the **Folder** or **Playlists** options. If there are no playlists on the data carrier, track selection takes place automatically using the folder structure.

### Selecting a folder



 
- ▶ Press the  button to select **Folder** and press  to confirm.  
The available folders are displayed if they contain playable files.
  - ▶ Press the  button to select the desired folder and press  to confirm.
  - ▶ Press the  button to select the desired track and press  to confirm.  
The menu is exited and the track is played.
-  Pressing the  button exits the menu.  
Pressing the  button skips up a hierarchy level.

### Selecting a playlist

- ▶ Press the  button to select **Playlists** and press  to confirm.  
The available playlists are displayed.
  - ▶ Press the  button to select the desired playlist and press  to confirm.
  - ▶ Press the  button to select the desired track and press  to confirm.  
The menu is exited and the track is played.
-  By pressing the  or  button, you can play the next track or the previous track.
-  By pressing and holding the  or  button, you can fast-forward or rewind.

### Info menu

The **Info** menu contains information about the artist, album and track.

- ▶ Press the  or  button to select **Info** and press  to confirm.  
The information that can be called up is shown.

### Media menu

 
In the **Media** menu, you can select between USB and AUX media, (> page 18) and (> page 20).

### AUX mode

#### General information

You can connect an external audio source (audio AUX) to audio system basic. More information is available from any qualified specialist workshop, e.g. a smart center or a smart service center.



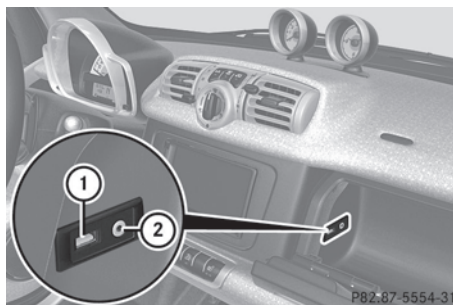


 
You will find a permanently installed 3.5-mm stereo-audio jack on the left of the stowage compartment on the front-passenger side to which you can connect external audio equipment (e.g. an MP3 player).



- ① USB port
- ② AUX port

For information on the operation of the external audio source, see the operating instructions of the external equipment.

### Activating AUX mode

- ▶ Press the  button.
- ▶ Press the  or  button to select **Music** and press  to confirm.
- ▶ Press the  button to select **Aux** and press  to confirm.  
The **Aux** menu appears and the selected medium is played.





 


AUX menu

### Setting the volume level







The volume of AUX sources may be quieter than the radio playback volume. There are therefore two volume level settings:

**Standard** and **Boost**.

- ▶ Press the  button to select **Volume** and press  to confirm.  
The options **Standard** and **Boost** are available.
- ▶ Select the desired option by pressing the  or  button and press  to confirm.  
The menu is exited.

### Media menu

In the **Media** menu, you can select between USB and AUX media.

- ▶ Press the  or  button to select **Media** and press  to confirm.
- ▶ Press the  or  button to select the desired option and press  to confirm.  
The menu is exited.









Order no. 6522 6626 13  
Part no. 451 584 79 83  
Edition A 2013

